 




Removing the Dell Inspiron 1150 Modem Card

The purpose of this guide is to demonstrate how to remove/replace the modem card.

Written By: Lauren

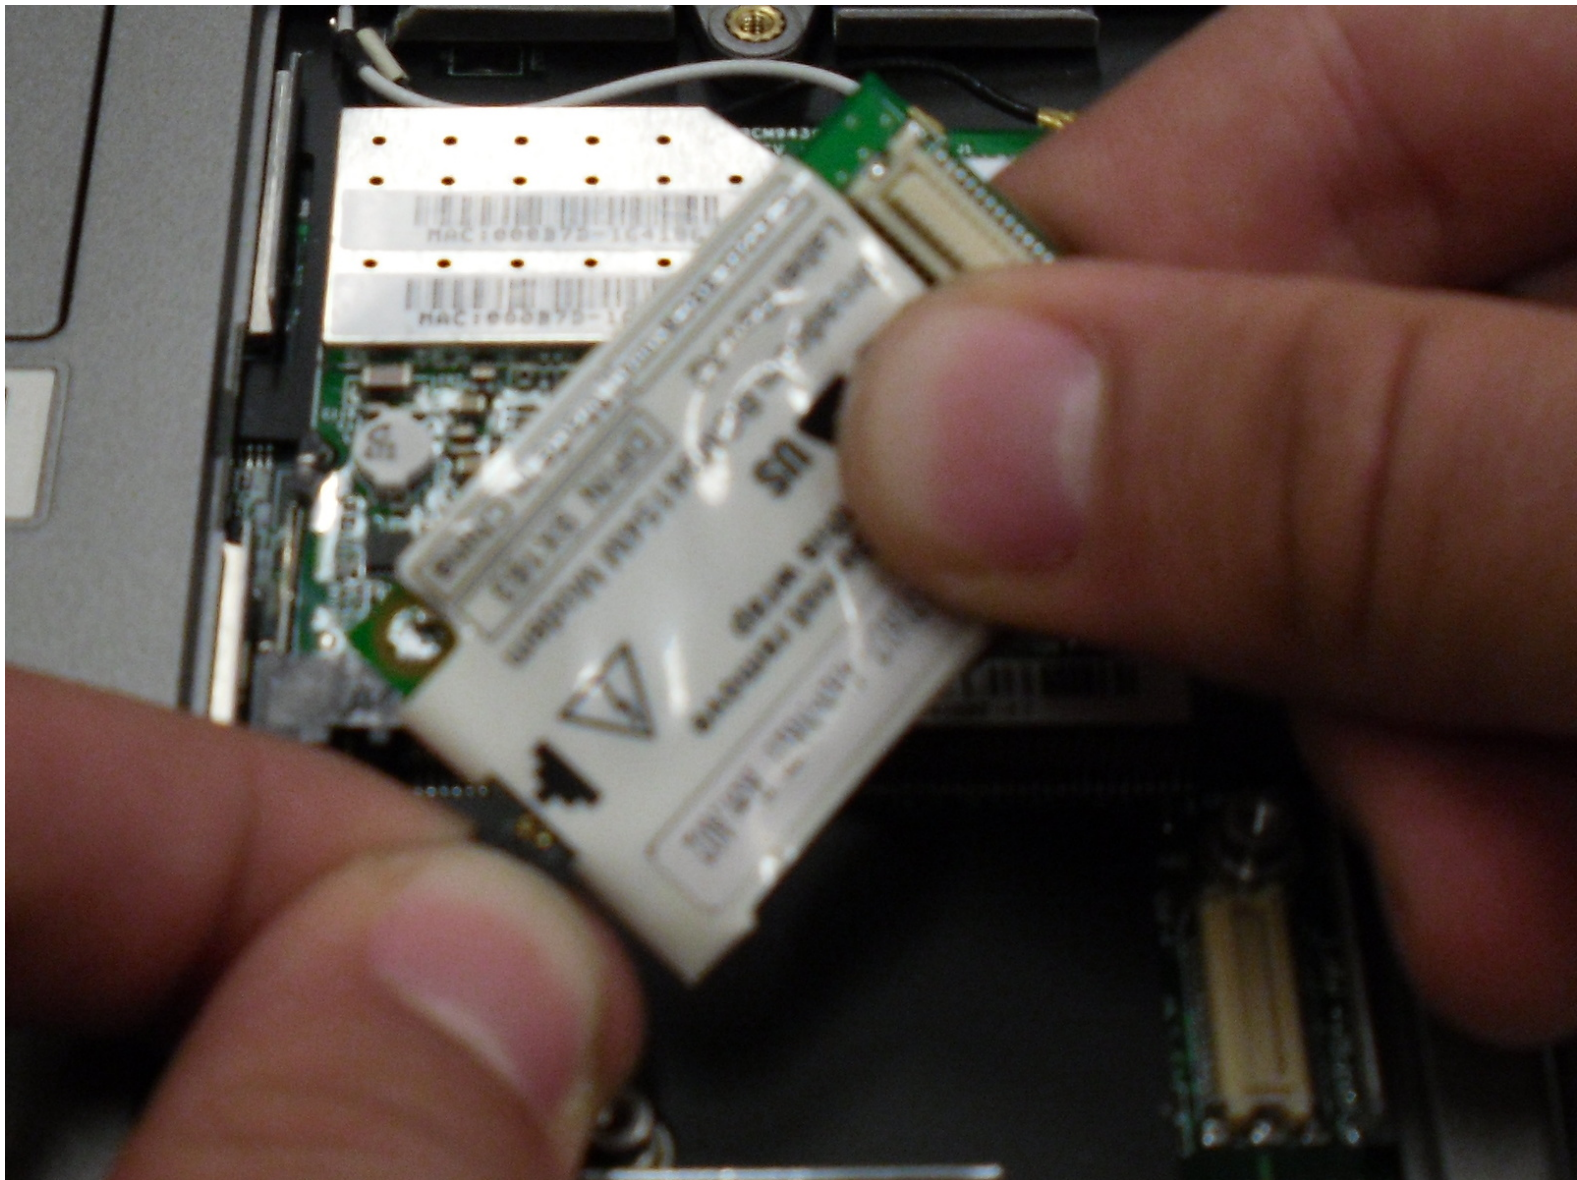




TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

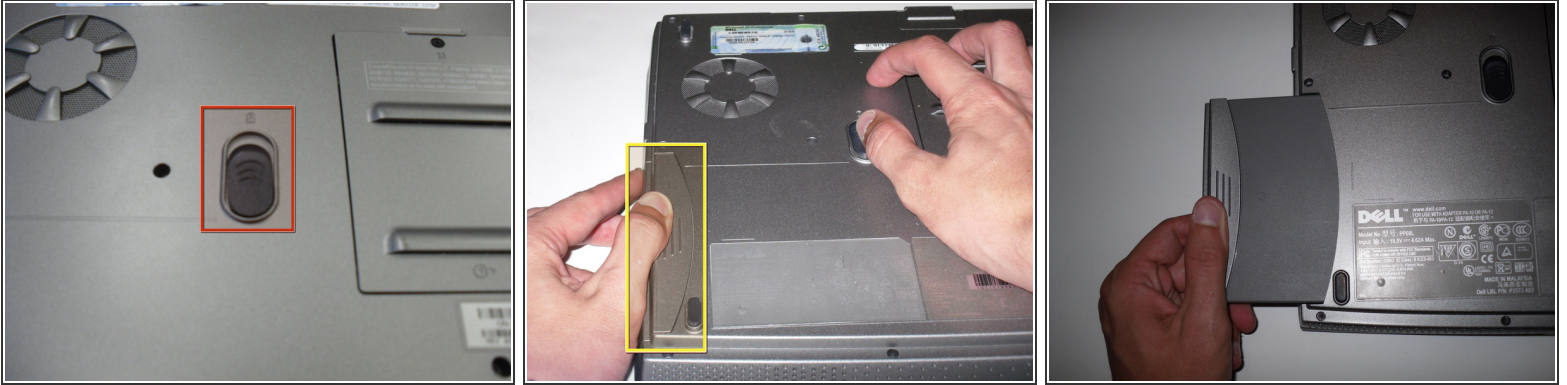

- Place the laptop upside down on a clean flat surface.
- Locate the "Battery Release" button. It has a little "Padlock" symbol next to it.
- Slide the "Battery Release" button towards the padlock symbol and hold it there. Note:- The button is spring loaded and will return if released.
- The battery should now be released from the battery compartment
- Gently extract the battery from the side of the laptop.

 Step 2 — Modem Card

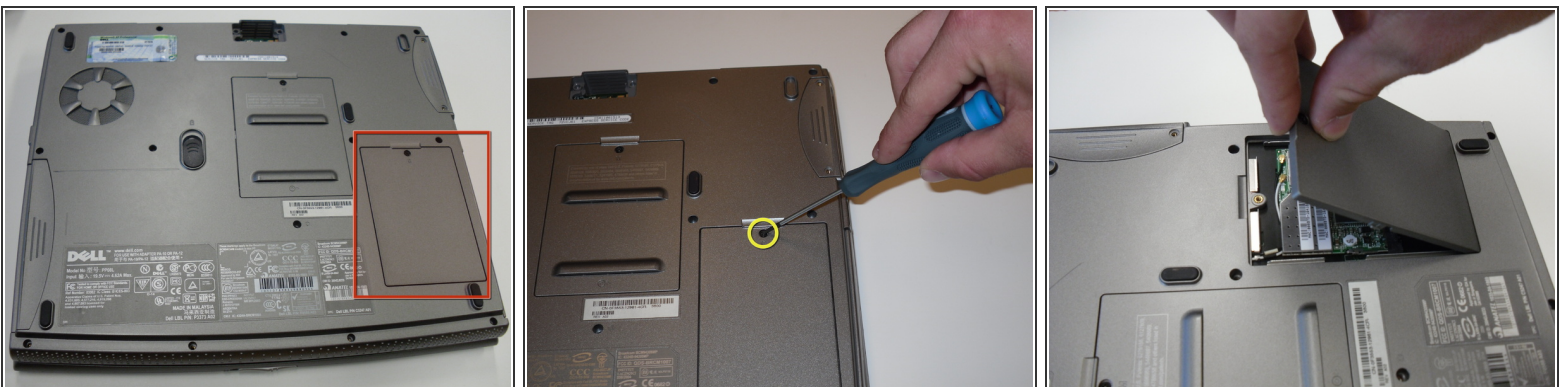


- Turn the laptop upside down and locate the panel labeled C
- Unscrew the single screw holding the cover in place.
- Lift up the cover and remove it to expose the Modem Card.

Step 3



- Locate the Modem card.
- Remove the screws.

 Step 4

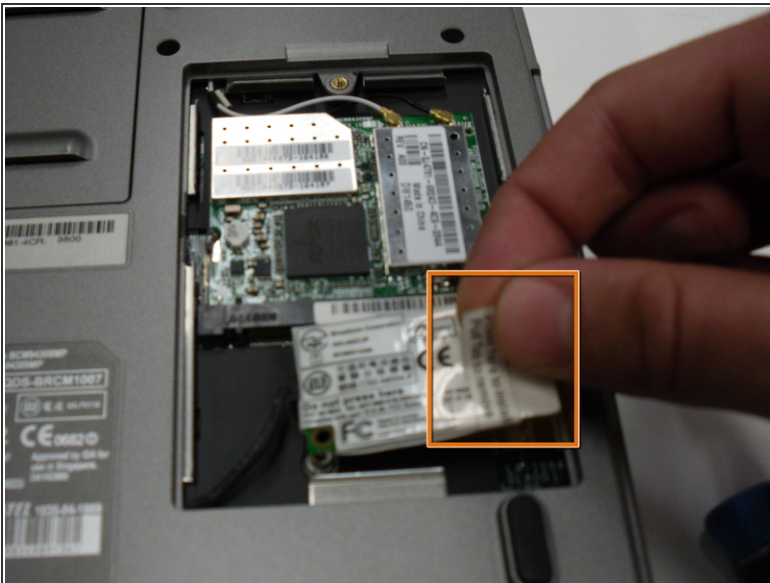

- Pull tab to lift the card out of the connector on the main board.
- Disconnect the cable attached to the left edge of the Modem card

